


COCKPIT GUIDE



N6644Y



- | | | | |
|------------------------|---------------------------|-----------------------------|-------------------------------|
| 1. TURN COORDINATOR | 7. ALTIMETER | 13. ADF RADIO | 19. TACHOMETER, RIGHT |
| 2. AIRSPEED INDICATOR | 8. RATE OF CLIMB | 14. COMM/NAV TRANSCEIVERS | 20. DOOR AJAR LIGHT |
| 3. GYRO HORIZON | 9. MARKER BEACON | 15. DME CONTROL | 21. FUEL/ENGINE GAUGE CLUSTER |
| 4. G/S COUPLER LIGHT | 10. ADF INDICATOR | 16. MANIFOLD PRESSURE GAUGE | 22. GYRO SUCTION GAUGE |
| 5. STALL WARNING LIGHT | 11. OMNI BEARING SELECTOR | 17. TACHOMETER, LEFT | 23. AMMETER |
| 6. DIRECTIONAL GYRO | 12. JUNCTION BOX | 18. FUEL FLOW GAUGE | 24. HOUR METER (TOTAL) |

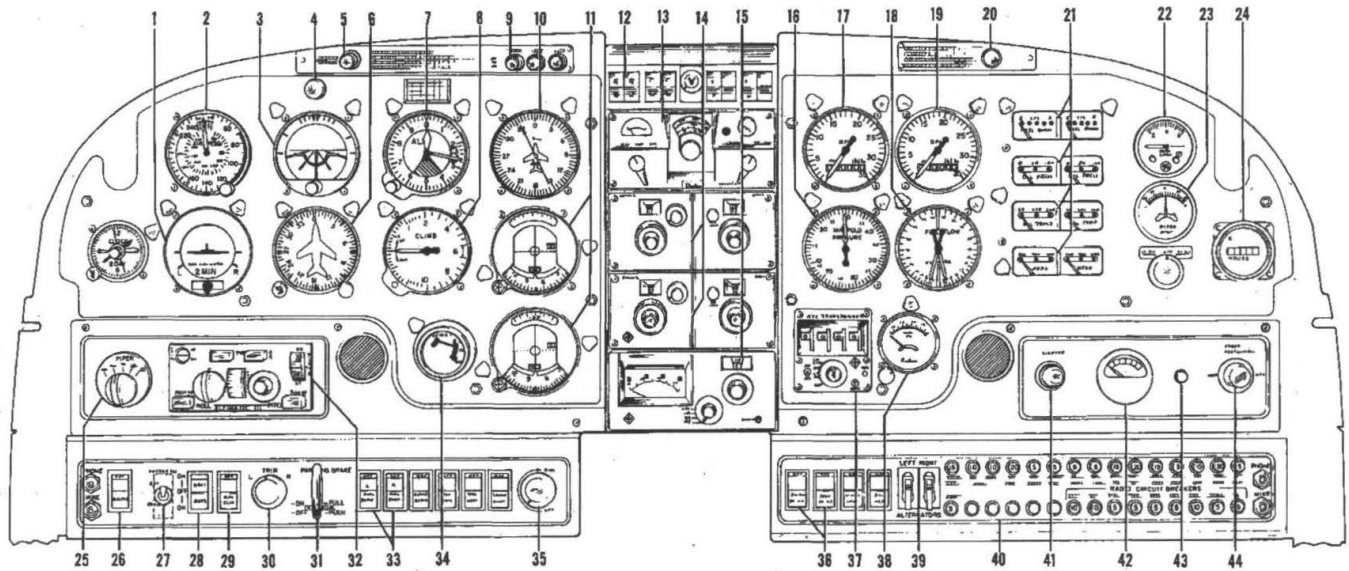

- | | | | |
|--------------------------|-----------------------------|-------------------------|--------------------------|
| 25. NAV/APPROACH COUPLER | 30. AUTOFLITE TRIM | 35. PANEL LIGHTS | 40. CIRCUIT BREAKERS |
| 26. MASTER SWITCH | 31. PARKING BRAKE HANDLE | 36. DEICING SWITCHES | 41. LIGHTER |
| 27. VOLTAGE REGULATOR | 32. ALTIMATIC III | 37. TRANSPONDER | 42. PROP DE-ICER GAUGE |
| 28. TRANSMITTER SELECTOR | 33. FUEL PUMP SWITCHES | 38. EGT GAUGE | 43. SURFACE DE-ICER TEST |
| 29. AUTOFLITE SWITCH | 34. FLAP POSITION INDICATOR | 39. ALTERNATOR SWITCHES | 44. HEAT CONTROL |



Left Seat Instrument Panel






Ignition and Starter Panel





Left Seat Subpanel

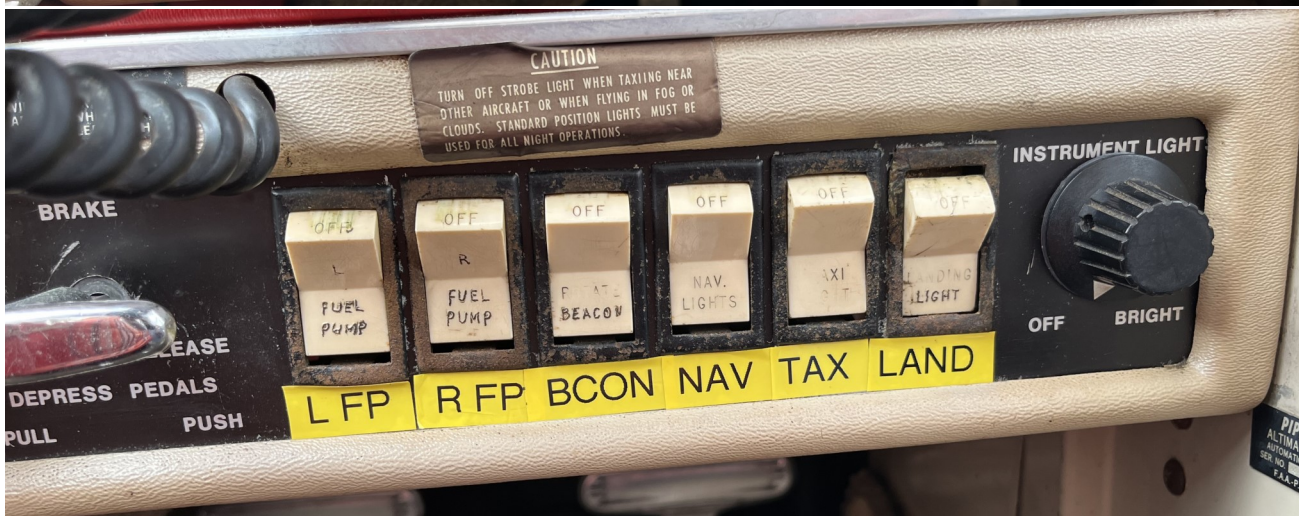



Emergency Landing Gear Extension






Avionics Stack





Throttle Quadrant & Center Console

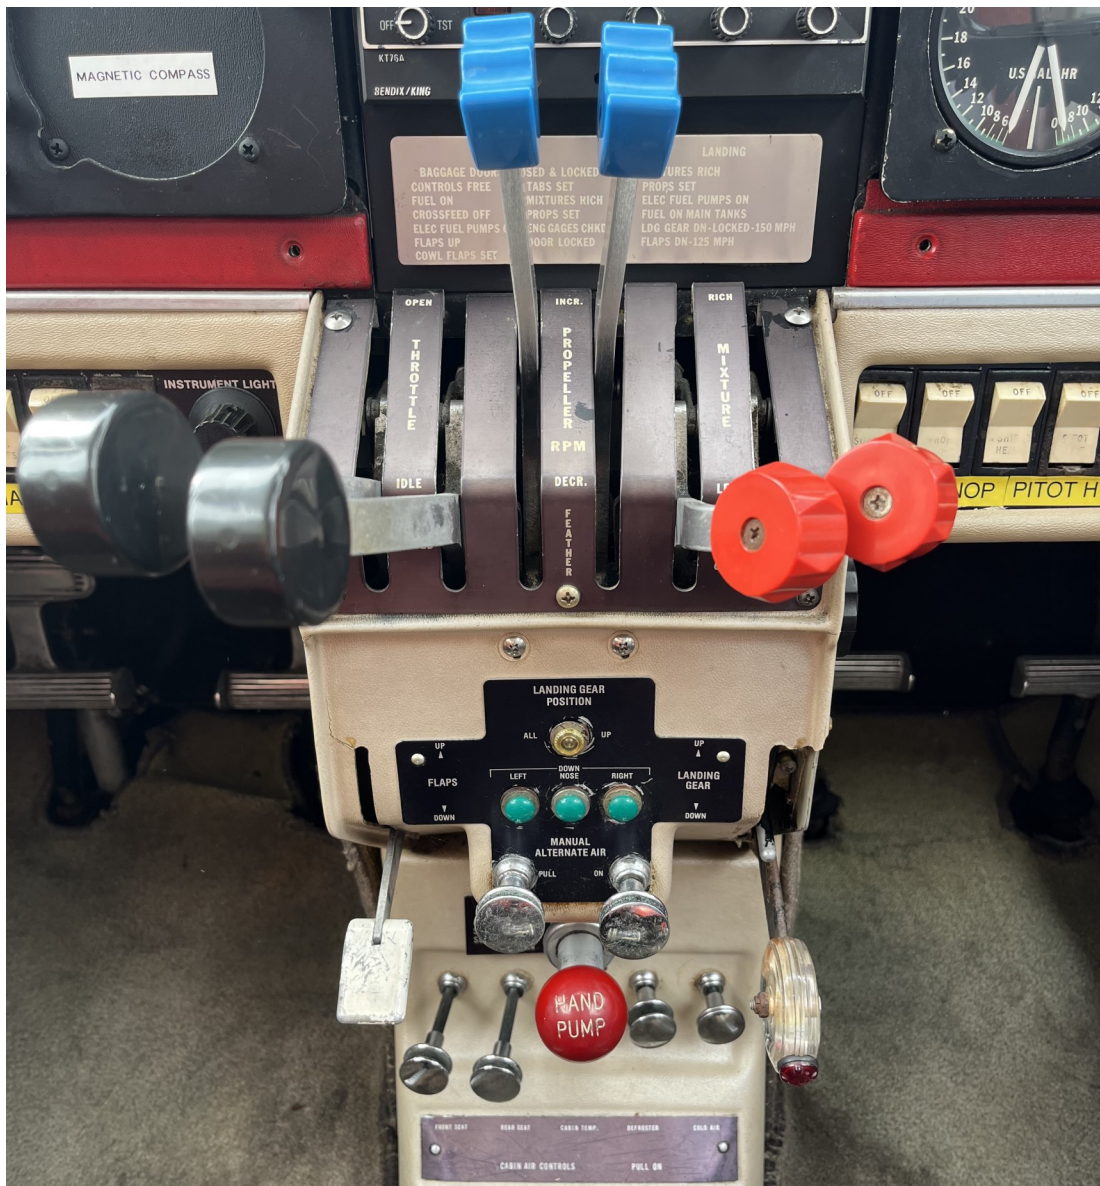



Fuel Control Panel





Right Seat Instrument Panel





Right Seat Subpanel





Overhead Panel

